

How to enable / disable the SIP module

The administrator can disable the SIP module by following the steps below:

1. Log in to the CLI using Telnet or SSH. You can also access the CLI from **admin > Console** in the upper right corner of the Admin Console screen.
2. Choose option **4. Device Console**.
3. Execute the following command(s):

console> system system_modules sip unload

```
console> system system_modules sip unload
```

Note:

To load the SIP module again, execute the following command at the console prompt:

```
console> system system_modules sip load
```

```
console> system system_modules sip load
```